

# THOMSON

## Juicer extractor

### THJU92T

## USER MANUAL



**Read the instructions carefully before use.**

This product complies with the requirements of the 2014/35/EC Directive (repealing the 73/23/EEC Directive, amended by the 93/68/EEC Directive) and the 2014/30/EC Directive (repealing the 89/336/EEC Directive).



## **Important Safety Instructions**

- Read these instructions for use carefully and look at the illustrations before using the appliance.
- Incorrect use of this appliance may cause personal injury and damage.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are age from 8 years and above and supervised. Keep the appliance and its cord out

of reach of children ages less than 8 years.

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- If the power cord of this appliance is damaged, it must always be replaced by manufacture or a service center authorized, in order to avoid hazardous situations.
- Caution: Ensure the product is switched off before removing it from the stand.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Do not use the appliance if the rotating sieve is damaged.

- The product is for indoor and domestic use only.
- Do not operate with wet or damp hands. Make sure that no liquid gets into the motor section.
- Never leave unattended when in use, and keep an eye on children.
- Remove the plug from the socket before removing the lid from the appliance before cleaning, or when not in use.
- NEVER use your fingers, kitchen utensils or similar to push ingredients down the feed tube! Use the accompanying tamper.
- NEVER stick fingers or other objects in the spout.
- NEVER touch the moving parts of the appliance until it has come to a complete stop.
- The centrifuge bowl must be handled with care, as it contains extremely sharp parts.
- Never use if the centrifuge bowl is damaged.

- Do not leave the appliance running nonstop for more than 3 minutes at a time. If the appliance has been running for 3 minutes, allow it to cool down for 7 minutes before you use it again.
- Do not place next to hot areas, for example gas rings and electric hotplates.

### **Cord, plug and mains socket**

- Ensure that the cord is fully extended.
- Do not allow the cord to hang over the edge of a table/counter, and keep it away from hot objects and naked flames.
- Check regularly that neither cord nor plug is damaged and do not use if they are, or if the appliance has been dropped or damaged in any other way.
- If the apparatus or plug is damaged, it must be inspected and if necessary, repaired by an authorized repair engineer, otherwise there is a risk of electric

shock. Never try to repair the appliance yourself.

- Avoid pulling the cord when removing the plug from the socket. Instead, hold the plug.
- Check that it is not possible to pull or trip over the cord or any extension cord.



For Food Contact Use.

### **IMPORTANT**

**It is forbidden to replace the power cable by yourself. In case of damage, it should be repaired by the after-sales service of local distributors, the manufacturer or similar qualified person. If the appliance is dropped, please ask professional qualified person to check before using it again. Internal damage may cause accidents.**

**For any kind of problems or repairs, please contact the after-sales service of local distributors, the manufacturer or similar qualified person in order to prevent any risks.**

#### **Disposal and environmental responsibility:**

In order to be environmental friendly, we encourage you to dispose of the appliance. You can contact local authorities or recycling centres for more information.

## PRODUCT OVERVIEW

- 1- Tamper
- 2- Fruit pulp holder
- 3- Motor section
- 4- Locking mechanism
- 5- Spout
- 6- Base
- 7- Centrifuge bowl
- 8- Power cord with plug
- 9- Funnel
- 10- Lid
- 11- On/Off button
- 12- Juice cup with lid
- 13- Brush



# **INSTRUCTIONS INSTALLATION**

## **PRIOR TO FIRST USE**

Before using for the first time, or after prolonged storage without use, wash any parts that will come into contact with food.

## **USING THE APPARATUS**

Assembly before use:

1. Place the motor section (3) on a flat surface, e.g. a kitchen counter, and make sure it is standing firmly on the four suckers underneath.
2. Place the base (6) on the motor section so that the spout (5) fits in the slot on the side of the motor section.
3. Push the fruit pulp holder (2) up under the drain edge on the base so that it locks on the foot of the motor unit tightly.
4. Carefully lock the centrifuge bowl (7) onto the base.
5. Be careful not to touch the sharp parts in the bottom of the centrifuge bowl.
6. Make sure that the centrifuge bowl sits properly on its base, so that the gear on the bottom of the bowl engages the gear in the base.
7. Make sure that the centrifuge bowl doesn't sit too loosely on the base and that it rotates evenly.
8. Place the lid (10) on the appliance so that it covers both the fruit pulp holder and the centrifuge bowl unit. Make sure that the lid fits tightly onto the base.
9. Turn the lock mechanism (4) to the vertical position and make sure that it engages the lid and locks it fast. The lock mechanism makes a clicking sound when this is done correctly.
10. Place a glass, bowl or other suitable container under the spout.
11. The apparatus now ready for use.

## **USING YOUR APPLIANCE**

### **Preparing fruits and vegetables for juicing**

- Always wash fruits and vegetables thoroughly before juicing.
- It is not necessary to remove seeds, pits or thin peels before using the appliance.
- Fruits with thick peels such as oranges and lemons must be peeled before juicing. It is particularly important to remove all the peel (including the pith), as even small amounts of peel can impart an unpleasant taste to the juice.
- It is also necessary to remove large pits (such as plum and apricot pits) to avoid damaging the appliance.
- Large fruits and vegetables should be cut into pieces that can fit into the funnel (9).

### **Use**

1. Start the appliance by turning the On/Off button to position "1" (low speed) or position "2" (high speed).
2. The low speed setting is suitable for juicing soft fruits and vegetables.
3. The high speed setting is suitable for juicing harder fruits and vegetables.
4. Feed the selected fruits and/or vegetables into the appliance through the funnel a little at a time, pushing them down using the tamper (1).
5. Make sure that you turn the tamper so that the groove in the tamper fits into the funnel properly.
6. Long vegetables such as carrots should be fed into the funnel pointy end first.
7. Press the fruits and/or vegetables gently with the funnel. Too much pressure reduces the amount of juice extracted and can damage the appliance.
8. Stop the appliance before removing the tamper to add more fruit/vegetables in order to avoid to avoid splashes.
9. Keep an eye on the fruit pulp holder and stop juicing before the holder becomes too full.
10. Always turn off the power by turning the "On/Off" button to "0" position before taking off the lid.

**Please note:** Do not leave the appliance running for more than 3 minutes at a time. If the appliance has been running for 3 minutes, allow it to cool down for 7 minutes before you use it again.

## TIPS

- If you line the fruit pulp holder with a plastic bag before using the appliance, it will be easier to clean the appliance.
- Use fresh fruits and vegetables – they contain the most juice.
- Good candidates for juicing include pineapple, apples, cucumbers, celery, carrots, spinach, melons, tomatoes and most citrus fruits.
- The various varieties of apple yield juice with different flavors and consistency. Experiment with different combinations to find your own favorite.
- Leafy green vegetables such as cabbage and spinach can be juiced. Roll the leaves into cylinders of an appropriate size before feeding them into the funnel.
- Fibrous fruits and vegetables as well as those with very firm flesh such as bananas, mangoes, papayas and avocados are not well-suited to juicing, as the result is often mashed fruit instead of juice.
- All types of juice should be consumed right after juicing, as fresh juice quickly loses important nutrients when exposed to the oxygen in the air. Taste can also be affected.
- Pure apple juice turns brown quickly when exposed to air. To prevent discoloration, serve apple juice immediately after juicing or add a little lemon juice.
- Remember that fruit pulp can be used in cakes, vegetable lasagna, muffins, etc.

## **Cleaning and Maintenance**

Remove the plug from the wall socket and allow the apparatus to cool down before cleaning.

1. The best way to clean the motor section is with a slightly dampened cloth and, if necessary, a little detergent. Do NOT immerse the motor section in any form of liquid!
2. The centrifuge bowl, fruit pulp holder, base and all other detachable parts can be washed up by hand or in a dishwasher.
3. Be careful not to touch the sharp parts in the bottom of the centrifuge bowl.
4. Do not use any kind of strong or abrasive cleaning agent on the appliance or its accessories. Never use a scouring sponge or similar to clean it, as the surface may be damaged.
5. Allow all parts of the appliance to dry completely before reassembling it after cleaning.

## Storage

- Ensure the appliance is clean and dry before storing.
- The appliance contains sharp parts - keep out of the reach of children.

**We decline any liability for defects due to improper use of the appliance and damage caused by service or repair made by a third party or due to installation of unauthorized parts.**



This logo affixed to the product indicates that is an appliance of which the waste processing falls within the framework of the 2012/19/EC , on Waste Electrical and Electronic Equipment (WEEE).

The presence of hazardous substances in electrical and electronic equipment may have potential effects on the environment and human health in the reprocessing cycle of the product.

Thus, at the end of the life of this appliance, it should not be disposed of with unsorted household waste.

As a consumer, your role is crucial in the cycle of reuse, recycling and other forms of recovery of electrical and electronic equipment. Waste reception center and collection facilities are implemented at your disposal by local communities (recycling facilities) and distributors. You have the responsibility to use the selective waste collection systems at your disposal.

The warranty does not cover the wear parts of the product, nor the problems or damage resulting from:

- (1) Surface deterioration due to normal wear and tear of the product;
- (2) Defects or deterioration due to contact with liquids and corrosion caused by rust or the presence of insects;
- (3) Any incident, abuse, misuse, alteration, disassembly or Unauthorized repair
- (4) Improper maintenance, improper use  
Concerning the product or connection to an incorrect voltage;
- (5) Any use of accessories not supplied or not approved by the manufacturer.

The guarantee will be cancelled if the nameplate and / or serial number of the product are removed.

**THOMSON** is a trademark of Technicolor SA used under license by SCHNEIDER CONSUMER GROUP.

***This product is imported by SCHNEIDER CONSUMER GROUP  
12, rue Jules Ferry, 93110 Rosny-sous-Bois, FRANCE***